## Motorola XTS & XTL Series Mobile & Portable Radios



## **Change Zones**

1. Press the <u>soft key</u> under the Zone menu item.



The zone name will begin to blink.



2. Use the left or right arrow on the <u>navigation button</u> to scroll zones.





3. When the desired zone is reached, press the <u>home button</u>.





4. Use the channel select knob to

change the channel name.







## Motorola XTS & XTL Series Radios

Top Side Button — Press and release to see the tower that the radio is affiliated with and the received signal strength (RSSI) as a number.

<u>PTT Button</u> — Push to talk. Wait for talk permit tone on digital channel.

Side Buttons 1 & 2 — Turns on display light.



RSSI Button — Press and release to see the tower that the radio is affiliated with and the received signal strength (RSSI) as a number.

<u>PWR Button</u> — Shows the programmed power setting (High or Low) of the radio.

Display Dimmer Button — Toggles display brightness (Off - High-Medium-Low-Off)

Power Button — Turns the radio on or off.

Zone -> Name	SE1	
Channel 1	SE1-PSAP	Į
Channel 2	SE1-MED	Į
Channel 3	SE1-EOC	Į
Channel 4	SE1-LE	ļ
Channel 5	SE1-EMGT	I
Channel 6	SE1-FIRE	I
Channel 7	SE1-EMS	F
Channel 8	SE1-PWKS	F
Channel 9		
Channel 10		]
Channel 11		I
Channel 12		
Channel 13		
Channel 14		
Channel 15		
Channel 16		

Used to talk to 9-1-1 Dispatch Centers.

Used to talk to Hospitals and EMS agencies.

Used to talk to Emergency Operations Centers and Emergency Managers.

Regional Law Enforcement Group - Only affiliates within the sub-zone.

Regional Emergency Management Group - Only affiliates within the sub-zone.

Regional Fire Group - Only affiliates within the sub-zone.

Regional Emergency Medical Group - Only affiliates within the sub-zone.

Regional Public Works Group - Only affiliates within the sub-zone.

Channels 9 through 16 will either be KHP Event Channels or will be unprogrammed. Event Channels are available for legitimate use without further authorization. They are statewide talkgroups.

